



HALF BRIDGE:  
 Without Q13,Q14, R45,R46,R47,R48  
 Transformer's second terminal to MID instead of OUT2.

**S56UUU TWT POWER SUPPLY  
 CONVERTER**

Use + volt sense OK - volt sense according to the polarity of output voltage.