


# UpgVID2G.EXE

## Navodila / User manual

Orodje za nadgradnjo OS VID2G / VID2G operating system Upgrading tool

S51KQ P.O.Box 11, SI-3212 Vojnik  
2000/01/04 <http://lea.hamradio.si/~s51kq>

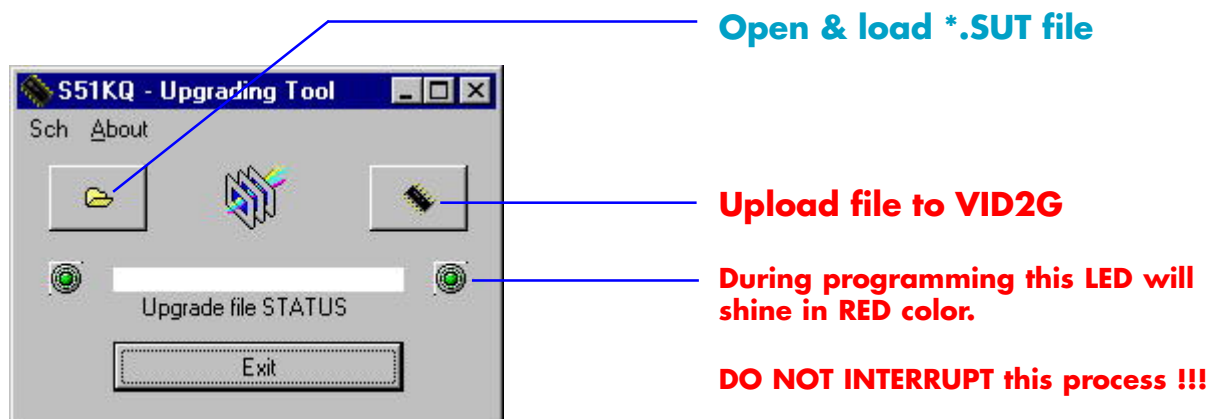

1. Pravilno poveži **PC (LPT-1)** s pomočjo 5 žilnega kabla na **AUX ISP** vtičnico VID2G tiskanine. Pazi na pravilni vrstni red (nožica 1)!!! AUX ISP se nahaja v bližini RESET tipke ob robu tiskanine.
2. Preklopi **JMP-1 na VID2G tiskanini na servisno pozicijo B-C.**
3. S pritiskom na gumb **LOAD** naloži VID2Gxxx.SUT datoteko.
4. Pritisni na gump **PROGRAMM** in počakaj na zaključek prenosa podatkov.
5. Preklopi **JMP-1 na VID2G tiskanini nazaj v normalno pozicijo A-B.**
6. Odklopi kabel za prenos in pritisni RESET tipko. VID2G sedaj deluje z novim op. sistemom.



### Napake in opozorila:

1. Napačno povezan kabel lahko trajno poškoduje VID2G ali LPT PC računalnika !
2. Če program javi da ni našel procesorja, si napačno povezal kabel, ali pa VID2G nima napetosti.
3. Nadgradnjo (VID2G upgrade) lahko ponoviš če je to potrebno.
4. V nobenem primeru poskušaj nalagati drugih datotek kot VID2Gxxx.SUT !
5. Datoteko \*.SUT ne odpiraj z nobenim urejevalnikom, ker jo bo pokvaril !
6. Uporaba na lastno odgovornost !

VID2Gxxx.SUT datotek ni dovoljeno kopirati, razmnoževati, posredovati drugim osebam ali organizacijam v kakršni koli obliki in kjer koli. Prepovedana predelava ali poskusi razbijanja. Vse pravice pridržane.

1. Correctly connect **PC (LPT-1)** to **AUX ISP** input on VID2G board (with help of 5 wire flat cable). Keep eye on PIN 1 !!! AUX ISP is located near RESET button on the edge of VID2G pcb.
2. Reconnect **JMP-1 on VID2G to service position B-C.**
3. Push button **LOAD** to find & open VID2Gxxx.SUT file.
4. Push button **PROGRAMM** and wait on data transfer.
5. Reconnect **JMP-1 on VID2G to normal position A-B.**
6. Disconnect cable and push once RESET button on VID2G. Device will run with new system now.



### Errors & notes:

1. Wrongly connected cable can permanently harm VID2G device or LPT on PC !
2. If the UpgVID2G.EXE reports that CPU can't be find: the cable is not connected (or wrongly), VID2G is not powered, or JMP1 is on incorrect position. Upgrading process can be repeated at any time.
3. Do not try to upload any other file than VID2Gxxx.SUT !
4. Do not try to open \*.SUT file with any kind of editor, it can be easily harmed !
5. Usage on self responsibility !

All rights reserved by author!

Multiplying, copying, renovation, reverse engineering, publishing, trading of VID2Gxxx.SUT files is not allowed !